

# **USER'S MANUAL**





#### Caution



Do not clean the product with the liquid or the volatility chemical. (it may damage on the product. And it might cause a fire or an electric shock.)

Do not insert something into the product and let the product be heavily attacked. (It causes the defectiveness and a fire and an electric shock might happen.)

Do not overcoat on the windshield. (it may distort and dim the video data.)

Make sure to pull out the SDHC card after turning off the product. (It might cause the damage on the SDHC card.)

Do not disassemble, repair or modify the product. It causes the defectiveness. It will void the warranty.

#### About the product

Thank you for purchasing MOVICAM HD. MOVICAM HD features a built-in GPS antenna, H.264 video compression for ultra-clear video, and intuitive playback software for you to archive and view your recorded videos. Janus HD is designed to record daily driving events inside your vehicle, and from the driver's view. To play back the events, please use the included MOVICAM HD software.

#### **Continuous recording**

During driving, the product can keep recording the road view, audio and GPS coordinates.

Record Speed – MAX. 30 fps

Resolution - 720P(1280 x 720), HVGAW (640 x 384)

#### **Event Record**

If some events happens while keep the continuous recording, the event record automatically performs(a user can change the setting menu).

Emergency (By pressing the emergency button)

Impact (By physical impact on the vehicle)

Over speed (for the case that the speed exceeds the one user set)

#### Analyze the data for video, audio, speed and GPS coordinates

Recorded data in SDHC card can be easily played back and analyzed in the exclusive MOVICAM HD viewer program. The recorded video/audio/GPS coordinates/Speed are to be shown in the MOVICAM HD viewer.

#### Contents of the package



- Contents of package can be changed.
- SDHC memory model can be changed in accordance with the market supply situation.



**\*** Mini USB is only for factory's debugging use. It cannot be used for the other purpose. It cannot be connected with PC.



#### Features

	MOVICAM HD
Image Sensor	1M CMOS sensor
Audio input	MIC Built In
Video Compression	H.264
Audio Compression	ADPCM
Record resolution	720P(1280*720), HVGAW(640*384)
Record Speed	Max.30fps
Emergence button	Event record by the emergency button
G-Sensor	Event record by the outside impact
GPS sensor	Event record by the user's set about over speed
Record Media	SDHC card (Max: 32GB, Default 8GB)
	Recommendation type: over Class 6
Lens	H93° , V70°
Viewer	Windows XP/ VISTA/ 7
Power	DC 7V~26V (enable Car Battery)
Operation	-5°~50°C (Storage temperature: -20° ~ 80°C)
temperature	
Humidity	10~95%
Weight	100g(Except SDHC card)
Size (W x D x H)	104.5(W) x 42(D) x 39.5(H)mm

※ As our products are subject to continuous improvement, we and our subsidiaries reserve the right to modify product design, specifications, and prices without notice and without incurring any obligation

#### Easy Installation

- 1. Please insert the SDHC card into the product.
- 2. Please combine the MOVICAM HD main body and the bracket.
- 3. Please assign the proper place of the windshield behind the room mirror and clean up the humidity and dirty on it with the dry fabric.
- 4. Please remove the protection cover the adhesive tape of the bracket.
- 5. After attaching the bracket on the windshield and fix the screw of the bracket with the coin.
- 6. Please connect the power cable with MOVICAM HD and tie up the power cable.
- 7. Please start the drive and use the product(Keeping REC LED light on means the normal operation).
- 8. Please remove SDHC card after turning off the product and check the recorded data in the exclusive viewer in PC.

# Caution

- When you install the product, please stop driving and park the vehicle at the safe place
- First connect the product to the power outlet then turn on it.
- Only use the supplied power cable(DC 12V~24V).
- Please clean up the windshield where the product is attached on MOVICAM HD. The dirty and the humidity can make the product dropped from the windshield.

#### Installation

1. Insert the SDHC card into the SD card slot like the left image. In case that the SDHC card is compulsorily inserted unlike the left image, damages will happen in SDHC card and the product.

2. Assemble the bracket with the main body.

3. The screw of bracket locates in the left side from the over view.

4. Assign the place on the windshield, on which the product is installed.

Before the installation, please clean off the dirty and the humidity on the windshield.

If possible, please install the product behind the middle position of the rear-view mirror to protect from interfering with a driver's sight view.

5. Remove the protection cover from the adhesive bracket and loosen the screw of the mounting bracket slightly loosen to adjust the mounting angle.

6. Firmly press the mounting bracket combined with the product onto the suitable place of the windshield. Hold for 3 seconds to secure.

7. Tighten the screw of the mounting bracket with the coin. Tighten screw to secure mounting position, Road view camera's angle should be adjusted in accordance with the windshield's tilt.

8. Put the power cable in order with the cable fix holder.

9. Plug in the car adapter to the product and into the cigarette lighter to power up.

10. Product takes 30 seconds to start up. It starts recording with a beep. During normal operation, REC LED will always be on.

11. Connect the mini-jack from the video cable into the Monitor port on the side.

# User's Manual

#### Install the viewer



Run "MOVICAM\_HD(1.x.x).exe" file from the installation CD. (If the OS is windows VIST/7, click the right button of mouse and install with user's authorization. Foreign languages are provided and the program will be translated according to the PC's OS

Connect the video cable into the 'video input' of the portable display(not included).

After clicking "Finish Installation", the viewer program automatically runs and the ICON creates.

#### Viewer Guide



A D	Backward play, Play	•	Volume up/down
004 >00	1 frame playback		Explore events
<b>(</b>	Repeat a event	×.	GPS signal window
00	Pause	<b>S</b>	Print
	Next Event		Back up
-4X -2X 1X 2X 4X FF	Playback speed	2	Set up
	Speed		Open a file
	E-google map (Under the conditions that the internet is		GPS Signal Bar
and the second s	connected)	24 m 24 22 23 13 13 17 28 14 19 10	

# User's Manual

#### How to playback



After turning off the product and take SDHC card. Insert SDHC card into PC and click the viewer program Icon to execute the program.





On the main menu, select the time data you want play and click the play button to watch the recorded data.

# Playback



Double click the left button of the mouse to convert the full screen from the main screen. To return the main screen, click the left button of mouse again.



On the play screen, click the right button of the mouse on the position to make the zoom. You can move everywhere for the zoom after pressing the button of the mouse. Press the right mouse to remove the zoom function.

### User's Manual

#### Back-up

M IPEG	
0.1.20	
BMP(Water Mark)	
AVI	
) JDR	
C G-SENSOR	

#### There are Image back up - JPEG, BMP, AVI Back up, JDR Back up, G-SENSOR Back-up.

-Back up for Image, AVI and JDR-

Select the time of the recorded data to be back up and press the back-up button.

In case of backing up the audio together with video, check "Audio" and nominate the path of data then press "Next" button to make progress of the back-up.

- AVI back-up file can be played back in Windows Media Player or other AV players.
- JDR back-up file can be played back in only JANUS HD viewer program.
- Image back-up file can be shown in an image viewer or "Paint" of Window OS.

Backup Information	
Select Channel	Audio ON/OFF
O Camera	Audio
Backup-Data Path	
C:\Users\L132\Documents\20110226_1156	10.avi Search
Backup Information	
backup information The Backup is complete!	
Bacup Information The Backup is complete!	100 %
Bacup information The Backup is complete!	100 %

### System Set-up

System	Event User Settings	Removable Disk Versio	n					
	Camera Settings							
	Resolution		Camera					
	Resolution	720P (1280*720) -	NORMAL(Fps) 3	0 🔻				
			EVENT(Eps) 3	0 -				
			Quality	ery High 🔻				
	Audio Recording		Over Write					
	O Use		O Use	🔘 Not Use				
	Standard time zone							
	(GMT+09:00) Seoul,Osaka,Sapporo,Tokyo							
	Automatically adjust clock for daylight saving changes							
	Auto Reboot		Km / Miles					
	AM 03:00	<u> </u>						
	SYSTEM will be reb	ooted every day for the	Km	Miles				
	stablity of operation	on.						

- Resolution- Select one among 720P or HVGAW.
- Camera- Adjust the frame/sec.
- Quality- Video quality can be set to one among 5 levels like "Very high/high/normal/low/very low".

# Above setting are to make the influence on the data size and the SD card storage space.

- Audio : Recorded with voice or not.
- Overwrite- In checking "use", when the SD memory card is full, it will automatically overwrite only the normal mode data saved on to the SD card from the beginning. In checking "Not use", it will not record after writing the last data in SD card.
- Standard time zone : Setting the appropriate time for each country
- Auto Reboot Set the auto reboot once daily for keeping the stable operation.
- Km/Miles- Choose Kilometers or Miles on viewer.

#### Event Set-up

System	Event	User Settings	Removable Disk	Version			
	Event		Event Re	ecording Time			
	EME	RGENCY	Pre-A	Alarm	2	6	2 Seconds
	🔽 IMP	ACT	Post-	Alarm	2	30	20 Seconds
	V OVE	RSPEED	Speed s	ettings	Q		100 🛋 .
	🔽 SUE	DEN STOP	Speed	40	neren Tree	200	100 💌 km
	🔽 SUE	DDEN START	Impact	Sensitivity	Normal		-

- Event- Emergency/Impact /Over speed /Sudden deceleration /Sudden acceleration
- Frame :

Pre-alarm: 2~6 seconds recording before event occurs.

Post-alarm:2 ~30 seconds recording after event occurs.

- Over speed- Set up the over speed monitoring system. Once the over speed limit has been exceeded, the device will begin recording. Km or Miles will be shown according to your chosen on System.
- Impact : Applying G-Sensor's sensibility

## User Settings

System Event	Jser Settings Remova	ble Disk Version	
	Car Info		
	Car Info		
	Driver Info		
	Liconco plato No		
	License plate No		
	User Info		
	User ID	admin	
	Password		

- Car Info- Input the license number of the vehicle.
- Driver Info- Driver's name.
- Serial No- The product's serial no.
- User's Info
- User ID- Input ID to log in the main screen(Default : admin).
- Password- Input the password to log i(Default- No password).



#### Caution

This menu is for the private information. Please keep this information from the disclosure.

In case of forgetting the password, you never log and watch the recorded data at all in the viewer program.

#### Removal Disk

System	Event User Settings	Removable D	Disk Version			
Re	emovable Disk					
	Select Drive		Drive Information			
	F:\	-	DISK :	F:\		
			TOTAL SIZE :	7.39	GB	
			FREE SPACE :	291.72	MB	
			DATA	RECOVER	FORMAT DRIVE	
					r 1 r	

In case that some errors happen in SD card, this function is for restoring or formatting the data of SD card. Before this work, please back up the recorded data in SD card in preparation for the worst case to lose the recorded data.

- Select the drive where is installed with the SD card.
- Select one among "Drive Format" and "Restoration".
- "Drive format" makes all recorded data removed. Please make sure to back up all data before performing "Drive format".

# 0

## Caution

The speed of the SC card declines significantly when used for a long period of time.

The management of SD card is important

Check and format the SD card every a week.

#### Version

- KERNEL- Show the information about KERNEL.
- RAMDISK- Show the information about RAMDISK.
- S/W VER- Shoe the information about the software.
- VIEWER- Show the viewer version.

#### How to upgrade

- Please download the firmware for upgrading the product.
   Visit http://www.januspage.com and download the latest firmware.
- 2. Turn off the product.
- 3. Remove SD card.
- 4. Connect SD card to PC and copy the downloaded latest firmware in the "update" folder of SD card.
- 5. After copying the latest firmware in the SD card, insert it in the product. At this point, the product should be in the power-off status.
- 6. Please turn on the product and make sure to keep supplying with the power.
- 7. The product will reboot with beep sound. Every LED will be flickering.
- 8. After the produce is successfully upgraded, it will normally operate after rebooting.

To check the normal operation after upgrading the product, please press the emergency button. If REC LED flickers, the normal operation is on.

# Troubleshooting

Phenomenon	Check point
The product does not turn on	Check if it is connected to a power supply
	Check whether the correct voltage is being used.
	Contact the nearest service center if the device doesn't
	turn on even if it is connected to a power properly.
	Check the fuse of the Cigar lighter . (more than 250V/3A)
Cannot find the recorded video	During search, make sure the recorded video is present
Does not record	Make sure if the SD card is not faulty
	Try again after formatting the SD card
	If the device beeps every 2 seconds, remount the SD card.
	If still having the problems, contact the service center.
Cannot reply the recorded video.	Make sure if the SD card is not faulty.
	Use the SD card recovery feature in the removable disk
	category of the viewer program.
	If still having the problems, contact the service center.
The objects are not clear in the video.	Try again after cleaning the lens with soft cloth
	Always keep the camera clean.
	If still having problems, contact the service center.
Cannot record at night.	Request the service from the retailer where the produce was purchased.
Cannot connect to EMAP	Check if connected to the network.
Cannot install the viewer program.	If using Window Vista and Vista 7, you need to install the viewer program with the authorized installation
Parts of audio or video data is lost	. Recommend using Class 6 or higher SD card.
PC does not recognize the SD card	Check if the SD card reader supports SDHC.
The time stamp of the data in the SD	Once the GPS starts to operate, the time will set to correct
card is not correct	value automatically. Check the selected time zone in the
	configuration settings stored in the SD card.
The audio playback is normal, but the	Compatibility problem with graphic card driver. Please
video playback is black	update with the latest version driver.

#### Reference

#### The scope of warranties and liability

- We are not responsible for the harm caused by product failure, damage due to loss of data, and other damage caused by using the product.
- This device's purpose is for recording the vehicle accidents but all the accidents that video recording is not guaranteed.
- If the power failure happens by the accident, the product might not keep recording the data.

#### Tip for GPS

- GPS connection time will vary depending on the vehicle's location and/or surrounding environment.
- Caution for the installation Install the product far from other devices in the vehicle. The Metallic coated windshield causes the bad GPS reception.
- Recalculation Guideline

GPS calculates the location based on the signal from the satellite so, it will take the time to recalculate due to the constant movement of the satellite. Depending on the amount of elapsed time after GPS, it takes will be different the GPS works correctly all the time. Namely, in case that there would be the big difference between the last position stored in GPS and GPS re-starting position, it will take the long time.

#### **Compatibility table for SDHC**

- SDHC Class 6 Type(SLC,MLC)
- FAT32
- Transcend Class6- 4G/ 8G/ 16G
- Sandisk Ultra Class4- 4G/ 8G/ 16G/ 32G