

AC-2100 User Guide

Version Eng-1.06



UNION
COMMUNITY

< Revision History >

Version	Date	Description	Firmware Version
1.00	2009-08-20	Initial Release	10.51.00
1.01	2009-10-29	Change the menu key - Menu : F2~ → F3~	10.51.01~
1.02	2010-03-08	<Multi Fn-Key > added (P.34) <Print Out> added (P.35) <Time Sync> added (P.42)	10.51.03~
1.03	2010-04-05	<F3 Time>, <F4 Time> added (P.34) <Template OnCard> added (P.36)	10.51.03-000.03 ~
1.04	2010-04-20	Add 12=Danish in <Language> (P.47)	10.51.04-000.00 ~
1.05	2010-10-05	Add 13=Russian in <Language> (P.47) <Blocking Time> added (P.37)	10.51.06-000.00 ~ 10.51.06-000.01 ~
1.06	2010-11-25	Add 14=French, 15=Farsi in <Language> (P.48) <Calendar> added (P.42) Add 3.Message in <Show User ID> (p36)	10.51.06-000.04 ~ 10.51.06-000.05 ~

< Terminology Description >

● Admin, Administrator

- As a user who can access using terminal menu mode, the administrator has rights to change the operating environment through registration/modification/deletion of terminal users.
- In case no registered administrator is available, anyone can access the terminal menu to change a particular setting. **Therefore, it is recommended to have at least one administrator.**
- As the administrator has rights to change important environment setting of fingerprint recognition device, special caution is required during registration and operation.

● 1:1 Authentication (1 to 1, Verification)

- This is a method that authenticates fingerprint after entering user ID or card
- This method is called 1:1 authentication because the fingerprint of a user

registered in a user ID or card.

- 1:N Authentication (1 to N, Identification)
 - This is a method that searches a corresponding user only with fingerprint.
 - This method is called 1:N authentication because it searches the identical fingerprint from the registered fingerprints without user ID or card input.
- Authentication Level
 - This is a level used during fingerprint authentication. 1~9 levels are available for display according to the level of fingerprint correspondence. The correspondence level of two fingerprints during authentication must be higher than the authentication level in the setting.
 - A higher authentication level provides a higher security level. However, a relatively higher correspondence rate may lead to a higher authentication failure rate.
 - 1:1 authentication level: Authentication level used during 1:1 authentication
 - 1:N authentication level: Authentication level used during 1:N authentication
- Authentication Method
 - This represents the various types of authentication methods formed with combination of FP (fingerprint) authentication and RF (card) authentication.
Example) Card or FP: Authentication with card or fingerprint
- Function Key
 - [F1], [F2], [F3] and [F4] keys are available. These keys allow a user to enter the menus or change modes such as office start/leave.
- LFD (Live Finger Detection): Imitation Fingerprint Prevention Function
 - This function allows the input of only real fingerprints and blocks the input of imitation fingerprints produced using rubber, paper, film and silicone.

Table of Contents




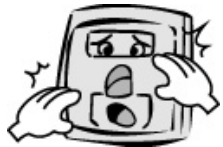
< Revision History>.....	2
< Terminology Description >	2
Table of Contents.....	4
1. Check before Device Use	6
1.1. Cautions for Safety	6
1.2. Terminal Component Name	7
1.3. Information on Button Required during Operation	7
1.4. Information on LED Signal Displayed during Operation.....	8
1.5. Information on Screen Displayed during Operation	8
1.6. Information on LCD Icon Displayed during Operation.....	10
1.7. Information on Voice Message Issued during Operation.....	10
1.8. Information on Buzzer Sound Issued during Operation	10
1.9. Proper Fingerprint Registration and Input Method	11
2. Product Introduction.....	13
2.1. Product Features.....	13
2.2. Configuration Figure	14
2.2.1. Independent Use (Access)	14
2.2.2. Connection with PC server (Access, Time & Attendance and Meal Service Management)	15
2.3. Product Specifications.....	16
3. Environment Setting	17
3.1. Items to Check before Setting Environment.....	17
3.1.1. Entering Menu	17
3.1.2. Modifying Setting Values	17
3.1.3. Saving after Completion of Environment Setting	18
3.1.4. Procedures to Enter Menu without Administrator Authentication	18
3.2. Menu Configuration	19
3.3. User Control.....	21
3.3.1. User Registration.....	21
3.3.2. User Deletion.....	24
3.3.3. User Change	24
3.3.4. Administrator Registration	28
3.3.5. All User Deletion	28
3.4. Network Setting	29
3.4.1. Terminal ID	29
3.4.2. IP Setting.....	30
3.4.3. Server IP Setting	32
3.5. Option Setting.....	33
3.5.1. Application Setting	33
3.5.2. Authentication Method Setting	35
3.5.3. Door Setting	37
3.5.4. Volume Setting	39
3.5.5. LCD Setting	41
3.5.6. Time Setting	42
3.6. Terminal Information Inquiry	43
3.7. Extra Function	44

3.7.1. Terminal Lock Setting	45
3.7.2. Card Number Inquiry	45
3.7.3. Sensor Monitor Input Port Setting	46
3.8. Device Setting.....	47
3.8.1. System Configuration	47
3.8.2. Card Reader Setting.....	48
3.8.3. Fingerprint Sensor Setting.....	48
3.8.4. Wiegand Output Setting	50
3.8.5. Terminal Initialization	51
4. How to Use Terminal	53
4.1. In Case of Operating as [0.Access Ctrl]	53
4.1.1. Authentication Mode	53
4.1.2. Authentication Using Fingerprint.....	53
4.1.3. Authentication Using Card	54
4.2. In Case of Operating as [1.T&A Ctrl].....	55
4.2.1. Authentication Mode	55
4.2.2. Fingerprint Authentication.....	56
4.2.3. Authentication Using Card	56
4.3. In Case of Operating as [2.Meal Ctrl].....	56

1. Check before Device Use






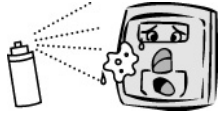

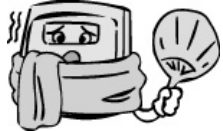
1.1. Cautions for Safety

● Warning

<p>Do not operate the device with wet hand, and do not let liquid such as water to flow into the device. -> It may cause device failure or electric shock.</p>		<p>Do not place the device near fire. -> It may cause fire.</p>	
<p>Do not disassemble, repair or modify the device without permission. -> It may cause device failure, electric shock or fire.</p>		<p>Do not let children play with the device. -> It may cause children safety accident or device failure.</p>	

- If displayed instructions are not followed, it may cause death or serious injury of a user.

● Caution

<p>Do not expose the device to direct sunlight. -> It may cause malfunction, deformation and discoloration of the device.</p>		<p>Do not install the device in a humid or dusty location. -> It may cause device malfunction.</p>	
<p>Do not spray water for cleaning the device. Do not wipe the device with benzene, thinner or alcohol. -> It may cause electric shock or fire.</p>		<p>Do not place the device near magnets. -> It may cause device failure or malfunction.</p>	
<p>Do not contaminate the fingerprint input area. -> Fingerprint may not be properly recognized.</p>		<p>Do not spray pesticide or flammable liquid on the device. -> It may cause deformation and discoloration.</p>	
<p>Do not apply impact on the device. Do not let a sharp object touch the device. -> It may damage the device leading to device failure.</p>		<p>Do not install the device in a place with a large variation of temperature. -> It may cause device failure.</p>	

- If displayed instructions are not followed, it may cause injury of a user or property damage.

※ We are not reliable for the accidents and damages caused by not following the user guide.

1.2. Terminal Component Name





1.3. Information on Button Required during Operation


F1	<ul style="list-style-type: none"> - Change to office start mode - At menu mode, used as [ESC] or move to left [←] button, used as [ESC] button if pressed down for longer than 2 seconds: [ESC~]
F2	<ul style="list-style-type: none"> - Change to office leave mode - At menu mode, used as move up or increase [↑] button
F3	<ul style="list-style-type: none"> - Change to work outside mode - Entry to menu mode if pressed down for longer than 2 seconds [F3~] - At menu mode, used as move down or decrease [↓] button




F4	<ul style="list-style-type: none"> - Change to return to office/access mode - At menu mode, used as [ENT] or move to right [→] button used as [ENT] button if pressed down for longer than 2 seconds: [F4~]
----	--








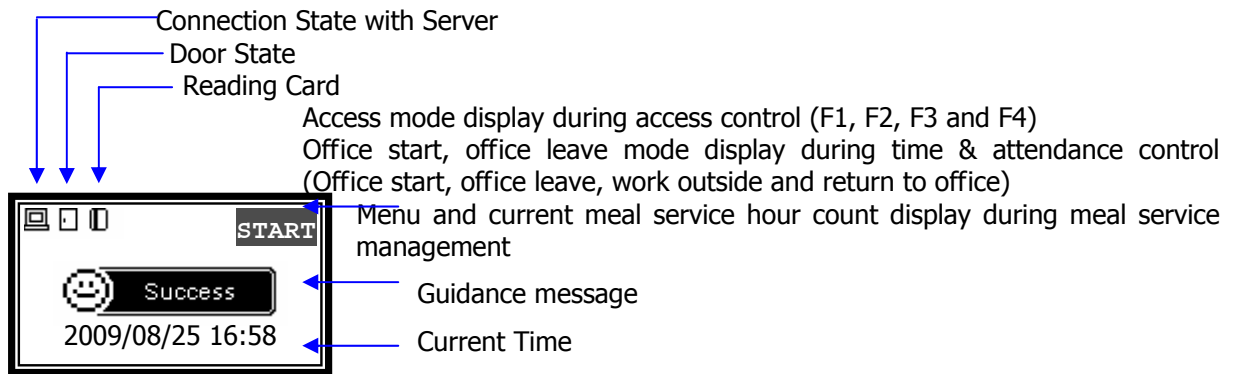

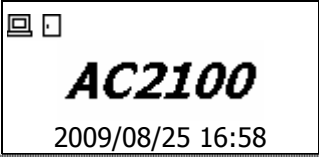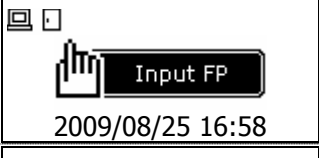












1.4. Information on LED Signal Displayed during Operation



	Power source	Red	Light on: Normal Light on and off: Cover open
	Door	Green	Light on: Door open Light off: Door closed

1.5. Information on Screen Displayed during Operation







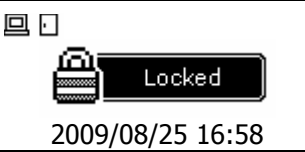

 <p>AC2100 2009/08/25 16:58</p>	- Default screen of AC2100
 <p>Input FP 2009/08/25 16:58</p>	- Under fingerprint input or waiting for fingerprint input
 <p>Success 2009/08/25 16:58</p>	- Authentication success

  <p>Matching fail</p> <p>2009/08/25 16:58</p>	<p>- Authentication failure</p>
  <p>FP Scan Fail</p> <p>2009/08/25 16:58</p>	<p>- Fingerprint input failure In case the finger is removed too early before the fingerprint is entered</p>
  <p>No record</p> <p>2009/08/25 16:58</p>	<p>- Unregistered card input - In case 1:N authentication is attempted when authentication priority is SN and a user with 1:N authentication permission is not available in the terminal</p>
  <p>Bad Passback</p> <p>2009/08/25 16:58</p>	<p>- Passback failure</p>
  <p>Server Busy</p> <p>2009/08/25 16:58</p>	<p>- In case processing is difficult during server authentication because too many authentication requests are made from the terminal</p>
  <p>Duplicate</p> <p>2009/08/25 16:58</p>	<p>- In case the same user attempts authentication more than twice during the same meal service hour when the terminal is set and used as meal service management</p>
  <p>Net error</p> <p>2009/08/25 16:58</p>	<p>- In case the server is not responding during authentication attempt to the server - In case network is disconnected during authentication attempt to the server</p>
  <p>Connecting</p> <p>2009/08/25 16:58</p>	<p>- In case connection attempt continues because no registered user is available in the terminal and connection to the server cannot be made</p>
  <p>Place your card</p> <p>2009/08/25 16:58</p>	<p>- Waiting for card input</p>
  <p>Time expired</p> <p>2009/08/25 16:58</p>	<p>- In case authentication is attempted with proper registration during the time when access is not permitted</p>
  <p>Verifying</p> <p>2009/08/25 16:58</p>	<p>- Waiting for response after authentication attempt to the server</p>

	<ul style="list-style-type: none"> - In case terminal is in lock state - In case it is not meal service hour when setting as meal service management
	<ul style="list-style-type: none"> - When upgrading terminal program (Do not switch off terminal power while this message is displayed.)

1.6. Information on LCD Icon Displayed during Operation

Server connection state	<ul style="list-style-type: none">  : LAN cable not connected  : LAN cable connected but not connected to server program  : Connected to server program
Door open/closed	<ul style="list-style-type: none">  : Door closed  : Door open
Reading card	<ul style="list-style-type: none">  : Disappears 1 second after a card is read

1.7. Information on Voice Message Issued during Operation

Operation	Voice guidance
Fingerprint input	Please enter your fingerprint.
Authentication success	You are authorized.
Authentication failure	Please try again.


1.8. Information on Buzzer Sound Issued during Operation

ppik	Alarm sound during button or card operation	In case button is pressed or card is read In case finger can be removed after fingerprint input is completed
ppibik	Failure	In case authentication fails or user input is wrong
ppiririk	Waiting for input	When informing that the system is waiting for fingerprint input
ppiririk	Success	In case authentication succeeds or the setting of a current user is completed

1.9. Proper Fingerprint Registration and Input Method

- Proper fingerprint input method

If possible, use the index finger and enter fingerprint as if you are making a thumbprint. Just touching a finger to the fingerprint input window is not the proper way for registration/input. The proper way is to touch the center of fingerprint on the fingerprint input window.

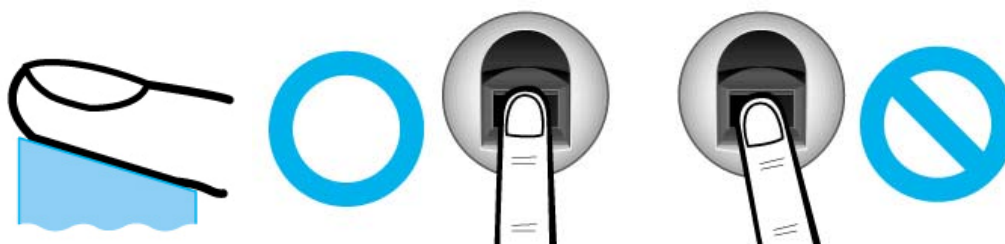

- If possible, use the fingerprint of the index finger for input.

With the index finger, a more accurate and stable fingerprint can be entered.

- Check whether the fingerprint is clear or it has wound.
Too dry or wet fingerprint, blurred fingerprint and fingerprint with wound are difficult to recognize. In such a case, use the fingerprint of a different finger for registration.



- Cautions according to the conditions of user's fingerprint

A fingerprint may not be usable or may be inconvenient to use depending on the conditions of fingerprint.

- This product is a fingerprint recognition system. If a fingerprint is damaged or weak, it cannot be used. If that happens, use a password for operation.
- **If your hand is too dry, breathe into it** for a while to ensure smooth operation.
- In case of children, fingerprint may be too small or weak to use. It is necessary to register the fingerprint every six months.
- In case of seniors, registration may be difficult if fingerprint has excessive fine wrinkles.
- It is recommended to register at least 2 fingerprints.

2. Product Introduction

2.1. Product Features

- **Access control system using network (LAN)**
 - As communication between fingerprint recognition device and authentication server is done using UTP cable and TCP/IP protocol, existing local area network can be used for good scalability. **10/110 Mbps auto detect** provides fast speed and allows easy management and monitoring through a network.

- **Convenient auto sensing function**
 - Authentication operation requires only fingerprint input without additional key input.

- **Simple authentication using fingerprint**
 - The use of fingerprint recognition technology, one of biometrics technologies, prevents loss of password, card, key or theft. As fingerprint is used, the security level of authentication is substantially increased.

- **Convenient guidance message using LCD and voice**
 - Using voice and LCD display window, every authentication operation is processed with guidance message. Especially, the built-in backlight of LCD display window allows for easy screen identification and key operation even in dark areas. As voice is saved in the memory, making change to a desired voice is possible at the server.

- **Provides various and flexible access control methods**
 - Convenient to use while preventing lending, forgery and loss of key or card
 - Provides perfect access control function by granting access rights for each user group
 - Provides flexibility in access control by granting limited access hour
 - Provides low maintenance and development cost compared to other access control devices
 - Removes inconvenience of obtaining additional card from management office for visitors

- **Applied in various operation systems such as crime prevention, access, time & attendance and meal service**
 - Supports various operation systems according to operation method setting of the terminal menu

- **Sufficient processing capacity of server**
 - In case of managing information of accessed people using the server,

nearly limitless processing is possible.


- **Provides various registration and authentication methods**

There are 4 registration and authentication methods available for general users. The registration and authentication method must be chosen before registering a user or administrator.


FP	Fingerprint registration Fingerprint authentication
RF	Card registration Card authentication
RF FP	Card and fingerprint registration Card or fingerprint authentication
RF&FP	Card and fingerprint registration Fingerprint authentication after card authentication

2.2. Configuration Figure

2.2.1. Independent Use (Access)

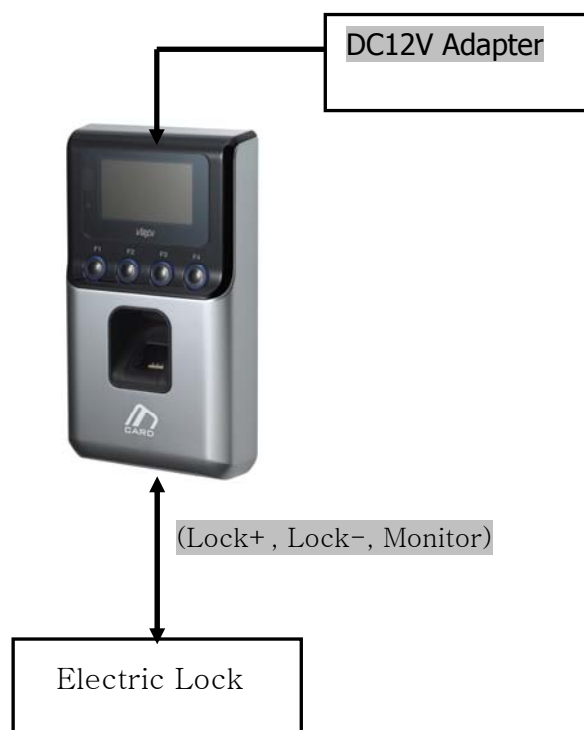

2.2.2. Connection with PC server (Access, Time & Attendance and Meal Service Management)

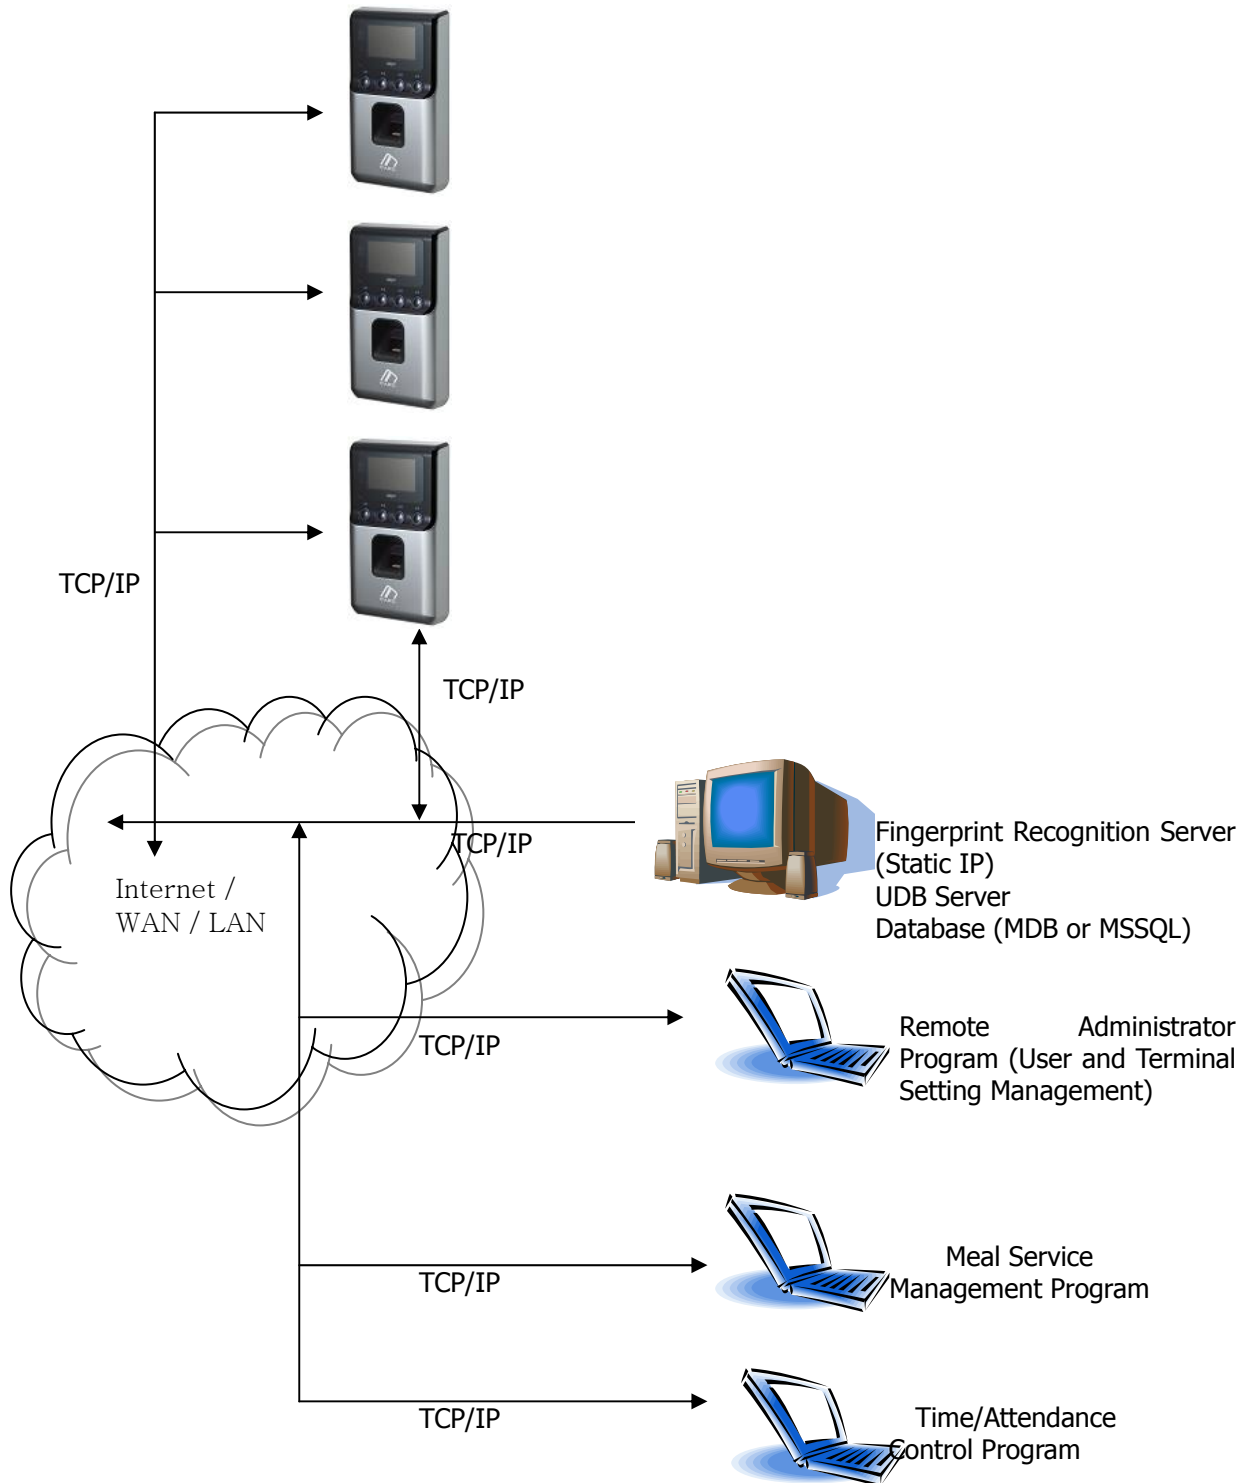

2.3. Product Specifications


Classification	Specification	Remarks
CPU	32Bit RISC CPU(266MHz)	
MEMORY	8M SDRAM	
	4M FLASH	100 User 100 Finger 5,119 Log
Fingerprint Sensor	Optical	
Authentication Speed	Within 1 second	
Scan Area / Resolution	13 * 15mm / 500 DPI	
FRR / FAR	0.1% / 0.001%	
Communication Port	TCP/IP	Authentication server communication
	RS-232	Meal service printer
	RS-485	External device communication
	Wiegand In/Out	Card reader or external device communication
Temperature / Humidity	-20 ~ 50 / Lower than 90% RH	
LCD	128 X 64 Graphic LCD	
SIZE	92.3mm * 169.9mm * 39.5mm	
AC / DC Adapter	INPUT : Universal AC 100 ~ 250V	
	OUTPUT : DC 12V (Option : DC 24V)	
	UL, CSA, CE Approved	
Card Reader	Smart Card Reader	A-type, 13.56MHz
Option	Door phone	

3. Environment Setting


3.1. Items to Check before Setting Environment

3.1.1. Entering Menu

If [F3] button is pressed for longer than 2 seconds, the following administrator authentication screen is displayed.

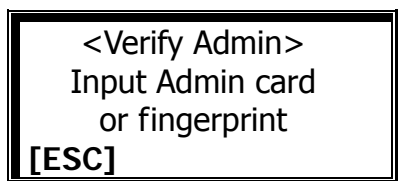

If administrator authentication with card or fingerprint according to the registered authentication method succeeds, the system enters the menu as shown below.

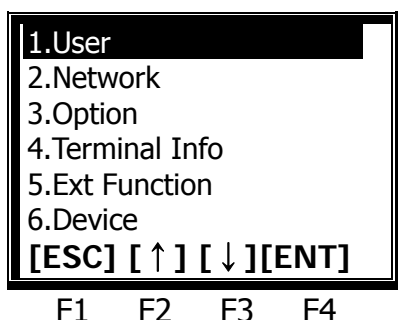

After selecting a desired menu with [↑](F2) and [↓](F3) button, press [ENT](F4) button to enter the lower menu.

The description of F1, F2, F3 and F4 button functions are displayed in order at the bottom of the screen as shown in the above figure. Move up and down and make selection by pressing [ENT](F4). The system can transfer to the upper menu by pressing [ESC](F1).

- ※ The administrator authentication is displayed only when there is a registered administrator. Authentication is required only once during entry to the menu. Access rights to all menus are valid until the system leaves completely from the main menu.

3.1.2. Modifying Setting Values

Setting values can be modified by pressing [↑][↓] button.


If a setting value is longer than 2 digits, move to the location of a digit to change by pressing [←][→] button and change the value by pressing [↑][↓] button.

After checking the setting value, press [ENT] button to continue setting.
To move to the upper menu during setting, press [ESC] button.

In case that the [←][↑][↓][→] buttons are the only buttons displayed ([ESC] and [ENT] buttons are not displayed), pressing down [F1] button for longer than 2 seconds replaces [ESC] button function while pressing down [F4] button for longer than 2 seconds replaces [ENT] button.

3.1.3. Saving after Completion of Environment Setting

To save the modified setting values, press [ESC] button in the main menu screen. Then, the following screen is displayed.

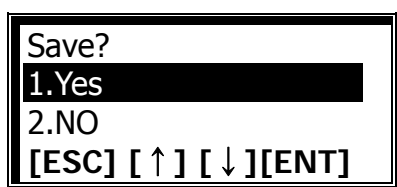

After selecting [1.Yes] to save the modified setting values or [2. No] to cancel them, press [ENT] button.

- If no modification was made, the system leaves from the environment setting menu without the above "Save?" process.
- If there is no input value for a certain period of time during environment setting change, the system leaves from the environment setting menu. If a modification was made in such a case, "Save?" process shows up. If no modification was made, the system moves directly to the default screen.

3.1.4. Procedures to Enter Menu without Administrator Authentication

In case fingerprint authentication cannot be made because administrator password or card registered in the terminal is lost or no administrator is available, use the following procedures to enter the menu.

- ① Open the terminal cover.
 - ② While the cover is open, set No. 4 dip switch of the board to the ON state.
 - ③ Press down [F3] button for longer than 2 seconds to enter the menu. If you press [F4] button at the administrator authentication screen, "ppirick" buzzer sound is heard and the system enters a selected menu.
- After the completion of setting value modification, **be sure to set No. 4 dip switch back to the OFF state.**

3.2. Menu Configuration


1.User	1. Add 2. Delete 3. Modify 4. Add admin 5. Delete All	
2.Network	1. Terminal ID	<Terminal ID> <Verify Mode>:NS/SN/NO/SO
	2.IP Address	<Network Type> <IP Address> <Subnet Mask> <Gateway>
	3. Server IP	<Server IP> <Server Port>
3.Option	1. Application	<Application> 0. Access Ctrl 1.T&A Ctrl 2.Meal Ctrl
		When setting as 0 or 1 <Start Time> <Leave Time> <Access Time>
		2.When setting as Meal Ctrl <Breakfast> <Lunch> <Dinner> <Supper> <Snack> <Without Limit>
	2. Verify Option	<Show User ID> <Only Card> <Template On Card> <Blocking Time>
	3. Set Doorlock	<Open Duration> <Door Monitor> <Door Open Alarm>
	4. Sound Control	<Voice Volume> <Beeper Volume> <Case Open Alarm>
	5. LCD Setting	<LCD Backlight> <LCD Light Ctrl>
6. Time Setting	<Time Sync> <Calendar> <Time Setting>	

4.Terminal Info	T-ID=0001 Ver=10.50.00 Application=Access Language=ENG Verify Mode=SN Network Type=Static Mac-Address=000265101234 IP Address=192.168.0.3 Gateway=192.168.0.1 Subnet Mask=255.255.255.0 Server IP=192.168.0.2 Svr-Port=2201 Card Reader=RF SC Wiegand CDR Version= Card Format=0 1:1 Level=3 1:N Level=4 All Admin=0 All User=0 Max User=100 1:N User=0 1:N FP=0 MAX 1:N FP=100 All FP=0 MAX FP=100 All Log=0 Max Log=5,119	
5.Ext Function	1. Lock Terminal 2. Read Card No.	
	3. Sensor Monitor	<Alarm Sensor1> <Send On/Off?> <Alarm Sensor2> <Send On/Off?>
6.Device	1. System Config	<ID Length> <Language>
	2. Card Reader	<Card Reader> <Card Format>
	3. FP-Sensor	<1:1 Level> <1:N Level> <LFD> <Check SameFP>
	4. Wiegand	<Wiegand Out>
	5. Initialize	1. Init Config 2. Delete Log 3. Init Terminal


3.3. User Control

3.3.1. User Registration

If "1.User" in the main menu is selected, the following screen is displayed.

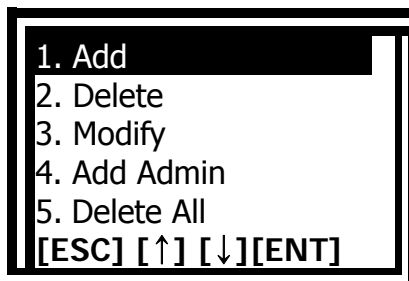


To register a new user, select "1.Add".

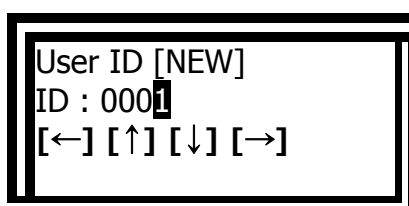

Enter the ID of a new user to be registered and press down [F4] button for a longer period of time.

The IDs that are allowed for registration are automatically shown on the screen during registration, thus allowing for a more convenient registration process. An ID can be changed using function keys. If an entered ID is already registered, the LCD message "Already registered ID" is displayed and a buzzer sound for failure is heard. Afterwards, the system moves to the upper menu. In case of an unregistered ID, the following authentication method selection screen is displayed.

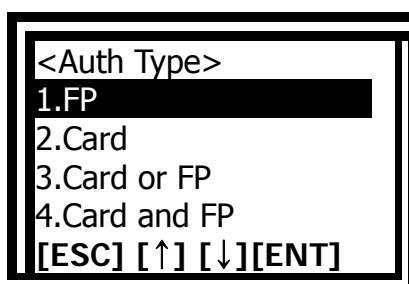


After selecting one of 4 authentication methods using [↑][↓] button, press [ENT] button.

3.3.1.1. Registration with "1.FP"

Both registration and authentication are made using fingerprint.

◆ At default screen [F3~] → [1.User] → [1.Add] → User ID [F4~] → [1.FP] → Select 1:1 authentication level [ENT] → Enter fingerprint → Reenter the same fingerprint ◆

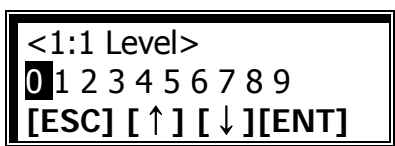


Recommended setting: '0'

This menu determines the authentication level for each user to be registered. The authentication level for each registered user can be set differently by changing this value.

If this value is set as '0', authentication is done using 1:1 authentication level set at the terminal rather than the authentication level for each user.


After the completion of setting, press [ENT] button to continue setting.

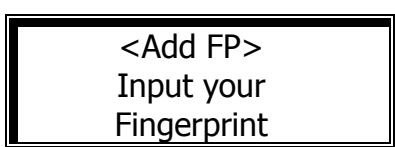

Enter fingerprint by referring to "1.9. Proper Fingerprint Registration and Input Method"

When the fingerprint sensor is lighted, touch the fingerprint input window with the finger. When "ppik" buzzer sound is heard, wait for 2~3 seconds until the light is turned off and remove the finger.

If the first fingerprint input succeeds, reenter the same fingerprint after the "Please try again" message (shown below) is displayed.



Reenter the same fingerprint.

Be sure to note that you must remove the finger from the fingerprint input window before you make the second fingerprint input attempt. When registration is completed, the system returns to "1.Add" selection screen. Up to 3 trials can be done should the registration fail.

The following are the LCD guidance messages displayed during the registration process.

Registration Completed!	In case of authentication success
Registration Failed!	In case of authentication failure
Fingerprint registration failed!	In case fingerprint image quality is poor or no fingerprint input is entered within 10 seconds after fingerprint sensor is lighted
Already registered FP	In case a user attempts to register an already registered fingerprint

If a proper fingerprint registration method fails after 2~3 trials, the use of card

is recommended.

3.3.1.2. Registration with "2. Card"

Both registration and authentication are made only using card.

◆ At default screen [F3~] → [1.User] → [1.Add] → User ID [F4~] → [2.Card] → Card reading ◆



Place a card to be registered. To cancel registration and escape, press [ESC] button.

When registration is completed, the system returns to "1. Add". Up to 3 trials can be made should the registration fail.

The following are the LCD guidance messages displayed during the registration process.

Registration Completed!	In case of authentication success
Registration Failed!	In case of authentication failure
Already registered card	In case a user attempts to register an already registered card

3.3.1.3. Registration with "3. Card or FP"

A user is registered with card and fingerprint. Authentication is done using card or fingerprint.

◆ At default screen [F3~] → [1.User] → [1.Add] → User ID [F4~] → [3.Card or FP] → Card reading → 1:1 authentication level [ENT] → Enter fingerprint → Reenter the same fingerprint ◆

For the registration process of a user, fingerprint registration (Refer to Registration with "1. FP") is done after card registration is completed (Refer to Registration with "2.Card").

3.3.1.4. Registration with "4. Card and FP"

A user is registered using card and fingerprint. Fingerprint authentication is also required after card authentication is completed.


◆ At default screen [F3~] → [1.User] → [1.Add] → User ID [F4~] → [4.Card and FP] → Card reading → 1:1 authentication level [ENT] → Enter fingerprint → Reenter the same fingerprint ◆

For the registration of a user, fingerprint registration (Refer to Registration with "1. FP") is done after card registration is completed (Refer to Registration with "2.Card").

3.3.2. User Deletion

◆ At default screen [F3~] → [1.User] → [2.Delete] → User ID [F4~] ◆

If "1.User" is selected by pressing [1] button in the main menu, the following screen is displayed.

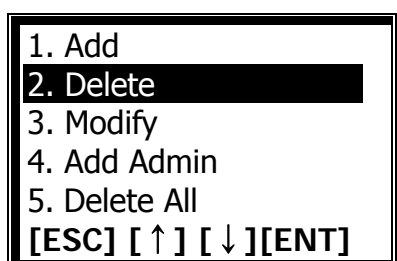

Select [2.Delete] to delete a user.

This is an item that deletes a user registered in the terminal. After entering the ID of a user to be deleted, press down [F4] button for a longer period of time. Afterwards, the buzzer sound for success is heard and user information is deleted from the terminal. Note that deleting information from the terminal does not delete the information in the server. To completely delete information, you must also delete the information in the server.


If the ID of an unregistered user is entered, the LCD message "Unregistered ID" is displayed and the buzzer sound for failure is heard. Afterwards, the system moves to the menu at the time of selecting "2. User Deletion".

Be sure to note that general user and administrator are not distinguished when deleted. Also, note that user information cannot be recovered in case of deleting a user who is registered only in the terminal but not in the network server.


3.3.3. User Change

◆ At default screen [F3~] → [1.User] → [3.Modify] → User ID [F4~] → Select information to modify → Modify user information ◆

Select "1.User" at the main menu.

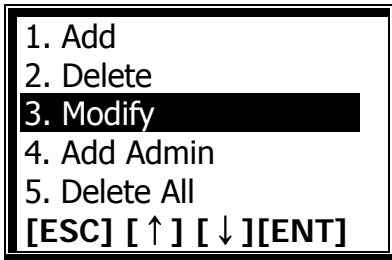

Select [3.Modify] to modify a user.

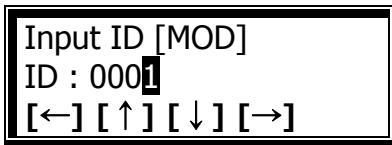


After entering the ID of a user to be modified, press down [ENT] button for a longer period of time.

Modification can be made without distinguishing general user and administrator. If the ID of an unregistered user (or administrator) is entered, the LCD message "Unregistered ID" is displayed and the buzzer sound for failure is heard. Afterwards, the system moves to the menu at the time of selecting "1.Add".

Items that can be modified vary according to the authentication method of a user. They are classified as shown below.


3.3.3.1. User Registered with "1.FP"

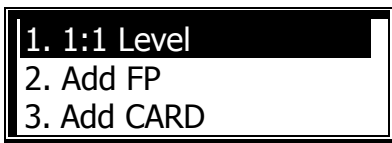

Select [1] to modify authentication level, [2] to add fingerprint to the corresponding ID and [3] to add card.

※ Up to 10 fingerprints can be registered in one ID. If registration exceeding 10 fingerprints is attempted by selecting [2], the buzzer sound for failure is heard and "Excess of the limit" message is displayed on the LCD screen.


[1] In case of selecting 1:1 level change

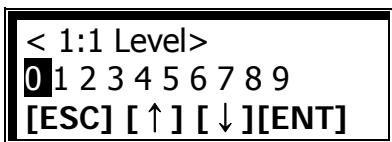

Recommended setting: '0'

To change it, enter a new setting value.


[2] In case of selecting Add FP

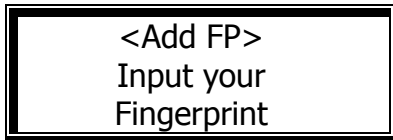

Enter fingerprint by referring to "1.9. Proper Fingerprint Registration and Input Method"

When the fingerprint sensor is lighted, place the finger on the fingerprint input window. If the "ppik" buzzer sound is heard, wait for 2~3 seconds until the light is switched off, and then remove the finger.

If the first fingerprint input attempt succeeds, the "Please try again" message (shown below) is displayed. Then, reenter the same fingerprint.



Reenter the same fingerprint.

Be sure to note that you must remove the finger from the fingerprint input window before you make the second fingerprint input attempt. When registration is completed, the system returns to "1.Add" selection screen. Up to 3 trials can be done should the registration fail.

The following are the LCD messages displayed during the registration process.

Modification Completed!	In case of registration success
Modification Failed!	In case of registration failure
Fingerprint registration failed!	In case fingerprint image quality is poor or no fingerprint input is entered within 10 seconds after fingerprint sensor is lighted
Already registered FP	In case of trying to register an already registered fingerprint
Excess of the limit	In case 10 fingerprints are already registered in the corresponding ID

[3] In case of selecting Add CARD



Press [ESC] button to cancel registration.


After the card is placed, the buzzer sound for success is heard and a newly entered card number is added.

If more than 3 card change trials fail, the buzzer sound for failure is heard and the system returns to "1. Add" selection screen.

The following are the LCD messages displayed during the registration process.

Modification Completed!	In case of registration success
Modification Failed!	In case of registration failure
Already registered card	In case of trying to register an already registered card
Excess of the limit	In case 10 cards are already registered in the corresponding ID

3.3.4.2. User Registered with "2.Card"

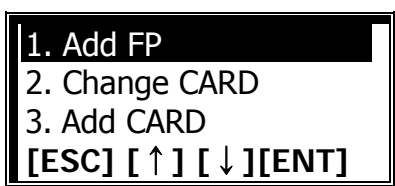

Select [1] to add fingerprint, [2] to change card and [3] to add card.

[1] In case of selecting Add FP: Refer to [2] In case of selecting Add FP of 3.3.3.1.

[2] In case of selecting Change CARD




Press [ESC] button to cancel change.

After the card is placed, the "Processing is completed." voice message is heard and the card number of a user is changed to the newly entered card. If card change trial fails more than 3 times, the buzzer sound for failure is heard and the system returns to "1.Add" selection screen.

[3] In case of selecting Add CARD: Refer to [3] In case of selecting Add CARD of 3.3.3.1.

3.3.4.3. User Registered with "3. CARD or FP" , "4.CARD and FP"

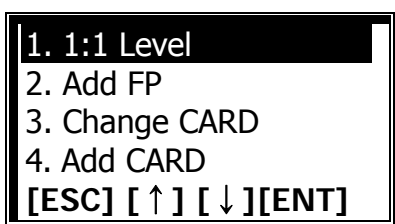


Select [1] to change authentication level, [2] to add fingerprint to the corresponding ID, [3] to change card number and [4] to add card

- [1] In case of selecting 1:1 Level change: Refer to [1] In case of selecting authentication level change of 3.3.3.1.
- [2] In case of selecting Add FP: Refer to [2] In case of selecting Add FP of 3.3.3.1.
- [3] In case of selecting Change CARD: Refer to [2] In case of selecting Change CARD of 3.3.3.2.
- [4] In case of selecting Add CARD: Refer to [3] In case of selecting Add CARD of 3.3.3.1.


3.3.4. Administrator Registration

- ◆ At default screen [F3~] → [1.User] → [4.Add Admin] → Administrator ID [F4~] ◆

Select "1.User" at the main menu.

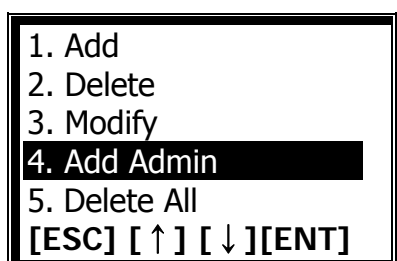

Select [4.Add Admin] to register an administrator.

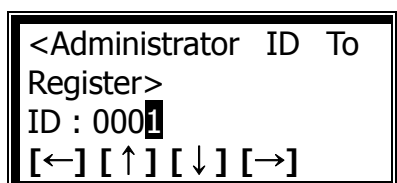

After entering the ID of an administrator to change, press down [F4] button for a longer period of time.


- ※ Administrator registration processes beyond this point are identical to general user registration processes.

A user registered as an administrator can change terminal's operation environment. An administrator can register/modify/delete information of all users saved in the terminal, therefore, caution should be exercised for terminal's administrator registration.


3.3.5. All User Deletion

- ◆ At default screen [F3~] → [1.User] → [5.Delete All] ◆

Select "1.User" at the main menu.

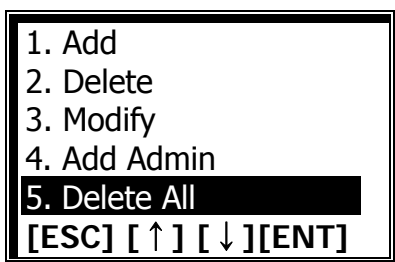

Select [5] to delete all users.

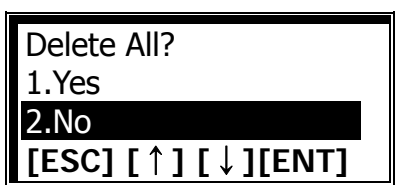


Select [1] to delete all users and [2] to cancel deletion.

After selecting "1.Yes" to answer the above confirmation question, **all users including administrators are deleted. Therefore, special caution needs to be taken before using this function.**

When the deletion process is completed, the buzzer sound for success is heard and the system returns to menu at the time of selecting "1.Add".

3.4. Network Setting

If "2.Network" is selected at the main menu, the following screen is displayed.

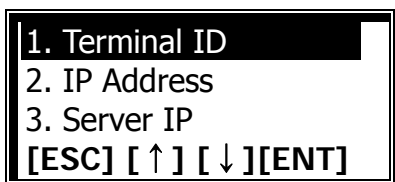


Select [1] to change terminal ID, [2] to change IP setting and [3] to change server IP.

3.4.1. Terminal ID

◆ At default screen [F3~] → [2.Network] → [1.Terminal ID] ◆


3.4.1.1. Terminal ID

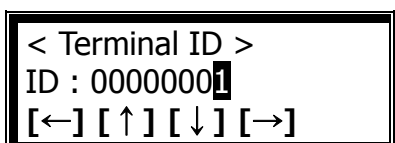

This ID is a unique ID used by the authentication server to distinguish the terminals. The default value is '00000001'.

This value must be identical to the ID of a door set at the server program. An 8-digit number is entered. Press down [ENT] button for a longer period of time to move to the next menu.

3.4.1.2. Authentication Priority [NS / SN / NO / SO] Setting

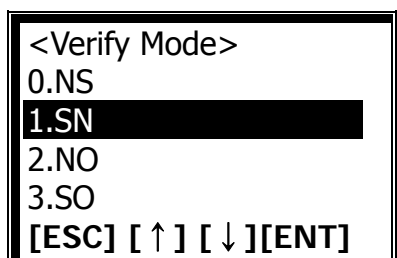

Select [0] for NS,
[1] for SN,
[2] for NO,
and [3] for SO.

This is an item that determines the authentication priority between a terminal and the network server. The default value is '1.SN'. Authentication procedures for each mode are shown below.

NS	If the server is connected, authentication is processed at the server. If the server is disconnected due to network failure, authentication is processed at the terminal.
SN	Even if the server is connected, authentication is processed at the terminal and the authentication result is sent to the server in real-time. But if an entered user is not registered in the terminal, authentication is processed at the server. (In case of 1:N fingerprint authentication, server authentication is not attempted.)
NO	Even if a user is registered in the terminal, authentication is always processed at the server.
SO	Only a user registered in the terminal is authenticated. If the server is connected, the authentication result is sent in real-time.


It can be set flexibly according to various considerations such as the number of terminals connected to the server, the number of users to be authenticated or the frequency of network failure occurrence. However, in case the number of authentication trials is high because more than 10 terminals are connected to the server or in case network failure occurs frequently, SN authentication ('1' setting) is recommended.

After carefully entering the input value, press [ENT] button to move to the upper menu.

3.4.2. IP Setting

◆ At default screen [F3~] → [2.Network] → [2.IP Address] ◆

3.4.2.1. Connection Type Setting

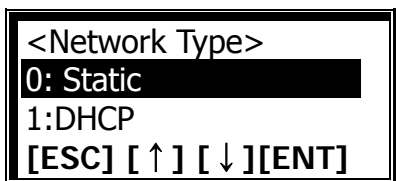

Select [0] to acquire static IP and [1] to acquire dynamic IP.


This item selects a type for connecting a terminal to a server. The default value is '0' (Static IP).

Select [0] if a static IP is acquired from the connected server and [1] if a dynamic IP is acquired from the DHCP server existing in the network.

After carefully entering the input value, press [ENT] button to continue setting.

※ If the connection type is set as static IP (0), the following 3.4.2.2. IP address, 3.4.2.3. Subnet mask and 3.4.2.4. Gateway need to be set. However, a dynamic IP does not require these setting processes.

3.4.2.2. IP Address Setting

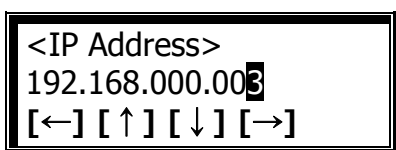


After moving to the position of a digit to change using [←][→] button, change the value using [↑][↓] button.

IP address assigned to the terminal is set.

After carefully entering the value, press down [F4] button for a longer period of time to continue setting.

3.4.2.3. Subnet Mask Setting

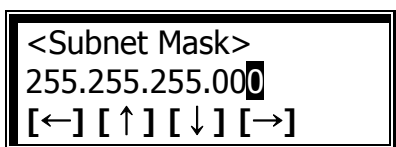


After moving to the position of a digit to change using [←][→] button, change the value using [↑][↓] button.

The subnet mask of the network which the terminal is connected to is set.

After carefully entering the value, press down [F4] button for a longer period of time to continue setting.

3.4.2.4. Gateway Setting

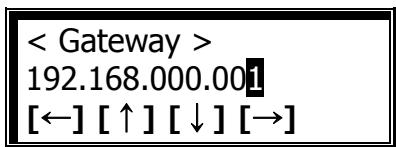

After moving to the position of a digit to change using [←][→] button, change the value using [↑][↓] button.


The gateway IP address of the network which the terminal is connected to is entered.

After carefully entering the value, press down [F4] button for a longer period of time to continue setting.

3.4.3. Server IP Setting

◆ At default screen [F3~]→ [2.Network] → [3.Server IP] ◆

3.4.3.1. Server IP Setting

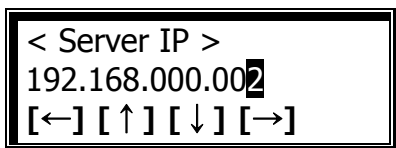


After moving to the position of a digit to change using [←][→] button, change the value using [↑][↓] button.

The IP address of the network server which the terminal is connected to is designated.

After carefully entering the value, press [F4] button for a longer period of time to continue setting.

3.4.3.2. Server Port Setting

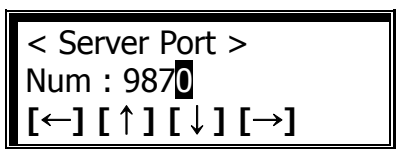

After moving to the position of a digit to change using [←][→] button, change the value using [↑][↓] button.

This is an item that enters the port of the authentication server. The default port value of the authentication server is '9870'. Note that if this value is changed, the value at the server program must also be changed.


After carefully entering the value, press down [F4] button for a longer period of

time to move to the upper menu.

3.5. Option Setting


3.5.1. Application Setting

If [3.Option] is selected at the main menu, the following screen is displayed.

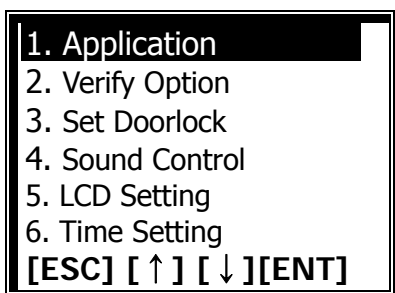

Select [1] to set the operation mode of the terminal.

◆ At default screen [F3~] → [3.Option] → [1. Application] ◆

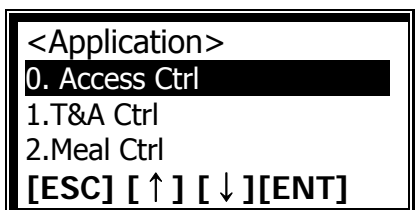


A desired operation mode can be set and the default value is '0' (Access Ctrl).

This item selects the operation mode of the terminal. Select '0' for operation as simple access control, '1' for operation as time & attendance control and '2' for operation as meal service management.

After making the selection, press [ENT] button to enter the sub-setting menu of each operation type.

3.5.1.1 In case of Setting as "[0. Access Ctrl]" or "[1. T&A Ctrl]"

This item sets the default setting hour of each time & attendance mode. It is possible to set terminal display mode to be automatically changed to time & attendance mode in setting after the completion of authentication.

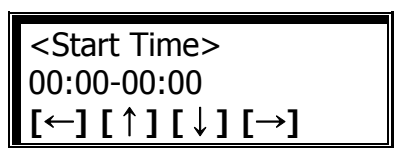

If time setting is not required, it is set to '00:00-00:00'.

This item sets the default office start time. After moving to the position of the time to change using [←][→] button, change the value using [↑][↓] button.

Unless other function buttons are pressed, office start time mode is always displayed during the time period in setting. Even if authenticated as office leave mode by pressing [F2] button, the mode is switched back to office start mode after authentication is completed to provide convenience in the time & attendance control.

After setting <Start Time>, the identical method is used to set <Leave Time>, <F3 Time>, <F4 Time> and <Access Time>. As shown in the following example, these hours must be overlapped.

(Example) Start Time=06:00~09:59, Leave Time=17:00~22:00

<Start Time> 06:00~09:59	<Leave Time> 17:00~22:00
-----------------------------	-----------------------------

Press [ENT] button to continue setting.

<Multi Fn-Key > 1.Yes 2.No [ESC][↑][↓][ENT]
--

Default Setting: '2.No'

This is the setting for using more than 5 authentication modes. It is the menu to make for F5~F7 by using F1~F3. If '1.Yes' is selected, F1(F2, F3) on F1 mode(F2, F3) is pressed again, it changes to F5(F6, F7) mode.

3.5.1.2. In case of Setting as "[2.Meal Ctrl]"

<Breakfast> 00:00-00:00 [←][↑][↓][→]
--


In case time setting is not required, it is set to '00:00-00:00'.

This item sets the breakfast hour. Authentication is done as breakfast during this hour.

After the completion of breakfast hour setting, the identical method is used to set <Lunch>, <Dinner>, <Supper> and <Snack>. 00:00-00:00 is set for meals that are not used.

Each of the meal hours must not be overlapped. For the hours not set for meal service, "Locked!" message is displayed on the terminal and all inputs except entry to menu mode are blocked just as in terminal lock mode.


In case the setting is made up to <Snack>, the menu that determines whether to allow duplicated authentication is displayed as shown below.

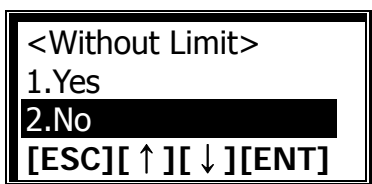

Default setting: '2.No'

If it is set to No, only one authentication is allowed during a given meal service hour. If the second authentication trial is attempted, authentication fails and "Duplicated!" message is displayed.

Press [ENT] button to continue setting.

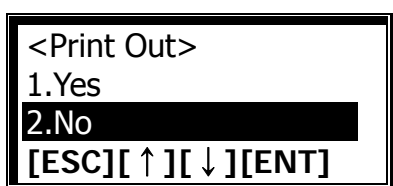


Default setting: '2.No'

This menu is to set up if the authentication result is needed for printing. If you set up '1', the printer connected by RS232 prints out terminal ID, user ID, date and time and authentication mode. The compatible printer is "SPR-350" Serial model.

3.5.2. Authentication Method Setting


If [3.Option] is selected at the main menu, the following screen is displayed.

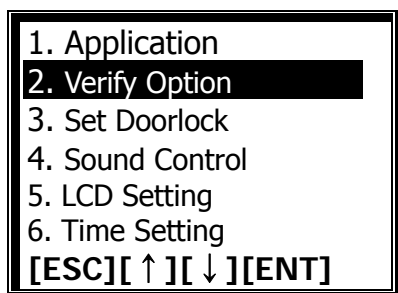

Select [2.Verify Option] to set the default authentication method of the terminal.

3.5.2.1. ID Display Option Setting upon Authentication Success

◆ At default screen [F3~] → [3.Option] → [2.Verify Option] ◆

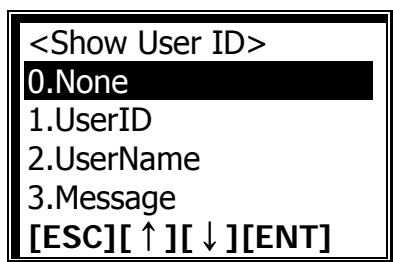

Default setting: '0'


If the default setting '0' is used, only the authentication result message is displayed upon authentication success. If it is set to '1', the ID of an authenticated user is displayed on the LCD screen as shown below. If it is set to '2', the user's name is displayed on the LCD screen. However, if the user's name is not available, the ID is displayed instead. If it is set to '3', the user's message is displayed on the LCD screen. However, if the user's message is not available, the ID is displayed instead.

(Example) OK!<0001>

Press [ENT] button to continue setting.

3.5.2.2. Setting to Determine Whether to Allow Authentication Only using Card

◆ At default screen [F3~] → [3.Option] → [2.Verify Option] → [ENT] ◆

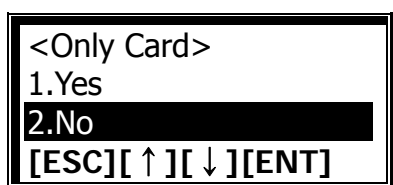


Default setting: '2.No'

This option allows authentication only using card without fingerprint input. In case this option is set to '1' in the terminal, only card authentication is done even if authentication with both CARD and FP is registered.

Press [ENT] button to continue setting.

3.5.2.3. Authentication option only with the stored info in Smart Card

◆ At default screen [F3~] → [3.Option] → [2.Verify Option] → [ENT] → [ENT] ◆

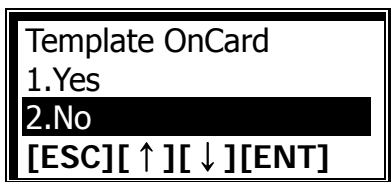


Default setting: '2.No'

This option allows identifying only with user info and fingerprint stored in the card and it does not require user info to be downloaded to the terminal. For the option, terminal must have Smart Card reader module and set up as '1. Yes' in <Template OnCard> menu

Press [ENT] button to continue setting.

3.5.2.4. Blocking Time Setting

◆ At default screen [F3~] → [3.Option] → [2.Verify Option] → [ENT] → [ENT] → [ENT] ◆

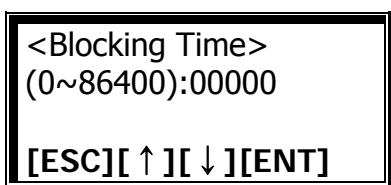


Default setting: 00000 (Unit: Second)

This function prevents a same user from getting authenticated again within a certain time. If the value is set for '0', there is no use but if it is greater than '0', the re-authentication will be permitted only after the time.

After selecting a setting value, press [ENT] button to finish authentication method setting and move to the upper menu.

3.5.3. Door Setting


If [3.Option] is selected at the main menu, the following screen is displayed.

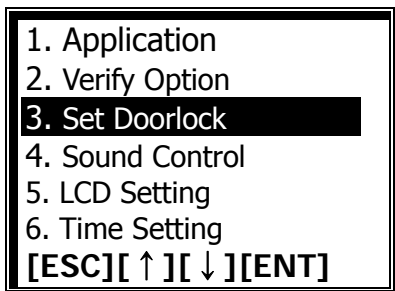

Select [3.Set Doorlock] for door setting.

3.5.3.1. Door Open Duration Setting

◆ At default screen [F3~] → [3.Option] → [3.Set Doorlock] ◆

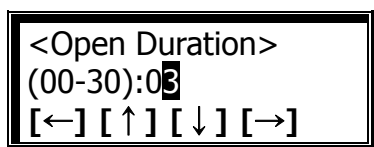

Default setting: '03' (Unit: Second)


This option sets the duration of time until the door is locked again after the door is opened through authentication success in the terminal. Strike type represents a time when the door is locked again automatically after the door is opened through authentication success. In case of dead bolt type and automatic door, the door operates regardless of these setting values.

If it is set to '00', door control is not possible. Use '00' setting only when the lock is not connected.

After selecting a setting value, press down [F4] button for a longer period of time to continue setting.

3.5.3.2. Door Open Status Check

◆ At default screen [F3~] → [3.Option] → [3.Set Doorlock] → [F4~] ◆

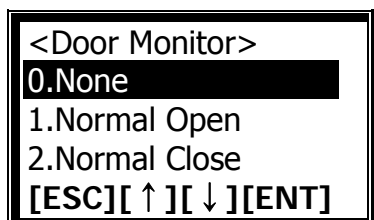


Default setting: '0'

- '0.None': In case door status is not checked
- '1.Normal Open': In case of dead bolt type or automatic door
(In case lock monitoring is open when the door is locked)
- '2.Normal Close': In case of strike type
(In case lock monitoring is close when the door is locked)

Select '0' for no setting, '1' for dead bolt type or automatic door and '2' for strike type. In case it is set to '1' or '2', information of the door connected to the terminal is sent to the server periodically.

After selecting a setting value, press [ENT] button to continue setting.

3.5.3.3 Door Open Alarm Setting

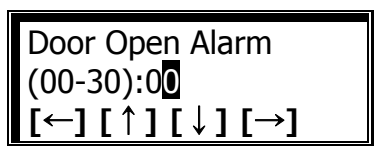

Default setting: '00'

The terminal checks how long the door is opened. This function issues an alarm if the door is opened for a duration that exceeds the time in setting (Min. 5seconds ~Max. 30 seconds).

If it is set to '00', an alarm is issued. Even if it is set to 01~04, an alarm is issued after at least 5 seconds are elapsed.


The door should be locked within the time in setting but the door may not be locked due to unforeseen circumstances. In such a case, an alarm is issued to determine the cause of a problem and take the necessary measures to ensure normal door operation.

To use this function, the lock must have a monitoring function that checks the opening/locking of the door. Also, the monitoring pin of the lock must be connected to the terminal. In addition, the door open state check in the previous item must be set to '1' or '2' in order to set this function.

After selecting a setting value, press down [F4] button for a longer period of time to continue setting. Afterwards, all settings for the door are completed and the system moves to the upper menu.

3.5.4. Volume Setting


If [3.Option] is selected at the main menu, the following screen is displayed.

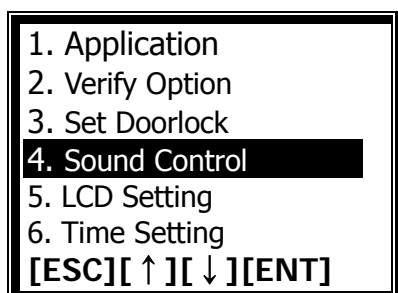

Select [4.Sound Control] to set volume.

3.5.4.1. Voice Volume Setting

◆ At default screen [F3~] → [3.Option] → [4.Sound Control] ◆

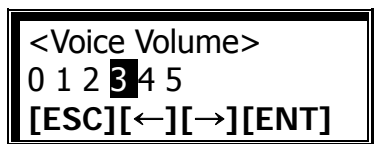


Default setting: '3'

This option sets the volume level during voice guidance. If it is set to '0', voice message is not issued.

Press [ENT] button to continue setting.

3.5.4.2. Buzzer Volume Setting

- ◆ At default screen [F3~] → [3.Option] → [4.Sound Control] → [ENT] ◆

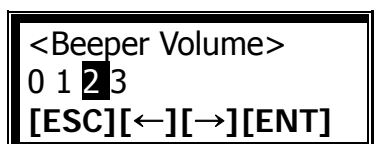


Default setting: '2'

This option sets the volume level of the terminal buzzer. If it is set to '0', no buzzer sound is heard. '1' produces low buzzer sound while '3' produces high buzzer sound.

Press [ENT] button to continue setting.

3.5.4.3. Cover Open Alarm Setting

- ◆ At default screen [F3~] → [3.Option] → [4.Sound Control] → [ENT] → [ENT]
- ◆

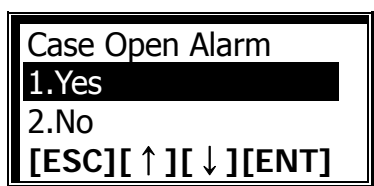


Default setting: '1.Yes'

This option determines whether to issue a warning after the terminal cover is opened. An alarm is issued for '1' setting and no warning for '2' setting.

After selecting a setting value, press [ENT] button to move to the upper menu.

3.5.5. LCD Setting


If "3.Option" is selected at the main menu, the following screen is displayed.

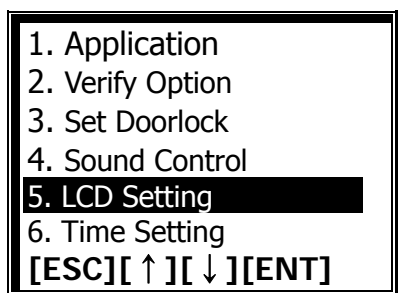

Select [5] to set LCD.

3.5.5.1. On/Off Setting of LCD Backlight

◆ At default screen [F3~] → [3.Option] → [5.LCD Setting] ◆

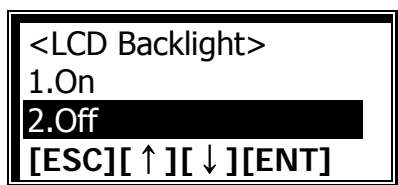


Default setting: '2.Off'

This option sets the on/off state of the terminal LCD backlight.

If it is set to '1.On', the LCD backlight is always on. If it is set to '2.Off', the LCD backlight is off except during key or card operation. The light is switched off automatically about 10 seconds after a key or card operation is completed.

Press [ENT] button to continue setting.

3.5.5.2. LCD Brightness Setting

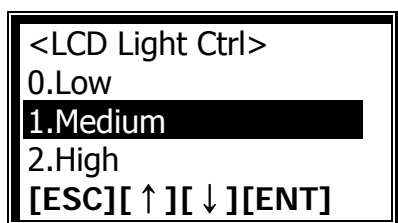


Default setting: '1'

This option sets the brightness of the terminal LCD light. Select '0' for dim light and '2' for bright light.

After selecting a setting value, press [ENT] button to move to the upper menu.

3.5.6. Time Setting


If "3.Option" is selected at the main menu, the following screen is displayed.

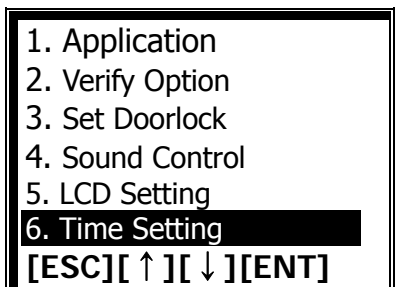

Select [6] to set the current time.

3.5.6.1. Time Synchronization

◆ At default screen [F3~] → [3.Option] → [6.Time Setting] ◆

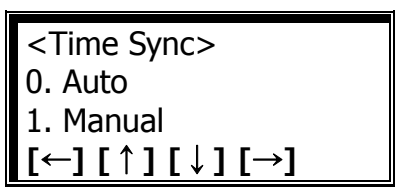


Default Setting: '0. Auto'

This menu is to set up the terminal time synchronization with the Server. '0. Auto' is to set the time synchronization automatically and '1. Manual' is to set manually.

Press [ENT] button to continue setting.

3.5.6.2. Calendar

◆ At default screen [F3~] → [3.Option] → [6.Time Setting] → [ENT] ◆

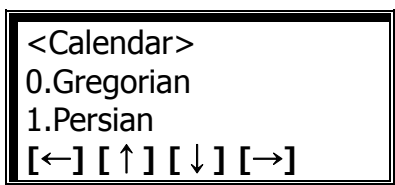

기본설정: '0.Gregorian'

This menu is to set up the terminal calendar. If it is set to '1.Persian', Persian calendar is displayed on the LCD screen.

Press [ENT] button to continue setting.

3.5.6.3. Current Time Setting

◆ At default screen [F3~] → [3.Option] → [6.Time Setting] → [ENT]] → [ENT] ◆

```
<Time Setting>
20090801211806
[←] [↑] [↓] [→]
```

The current time of the terminal is displayed and the time in the above example shows 2009:year, 08:month, 01:day, 21:hour, 18:minute, 06:second. To make time change, move to a desired position by pressing [←][→] button and increase/decrease the value by pressing [↑][↓] button.

If [F4] button is pressed down for a longer period of time, the current time of the terminal is changed and the system moves to the upper menu. To cancel the input, press down [F1] button for a longer period of time to leave from the current menu.

3.6. Terminal Information Inquiry

◆ At default screen [F3~] → [4.Terminal Info] ◆

If "4.Terminal Info" is selected at the main menu, the following screen is displayed. All environment setting values can be checked in order.

```
T-ID=0001
Ver=10.50.00
Application=Access
Language=ENG
Verify Mode=SN
Network Type=Static
[ESC][↑][↓]
```


The setting values in the following table can be checked in order by scrolling up and down using [↑][↓] key.

T-ID	Terminal ID
Ver	Firmware version of terminal
Application	Terminal operation mode (time & attendance + crime prevention/time & attendance/meal service)
Language	Language setting
Verify Mode	Authentication priority
Network Type	Network type distinction (static IP/dynamic IP)

Mac-Address	Ethernet hardware address of terminal
IP Address	IP address of terminal
Gateway	Gateway address of terminal
Subnet Mask	Subnet mask address of terminal
Server IP	IP address of network server connected to terminal
Svr-Port	Port number of network server program
Card Reader	Card reader type (RF SC Wiegand or SmartCard)
CDR Version	Card reader module firmware version
Card Format	Card data display type
1:1 Level	Authentication level used in 1:1 authentication
1:N Level	Authentication level used in 1:N authentication
All Admin	The number of administrators registered in a terminal
All User	The total number of users including administrators registered in a terminal
Max User	The maximum number of users allowed for registration in a terminal (100)
1:N User	The total number of users allowed for 1:N authentication
1:N FP	The total number of fingerprints allowed for 1:N authentication
MAX 1:N FP	The maximum number of fingerprints allowed for registration in a terminal (100) In case there are 50 registered users and each of them registered 2 fingerprints, the total number of registered fingerprints is 100.
All FP	The total number of fingerprints saved in a terminal
MAX FP	The maximum number of fingerprints allowed for registration in a terminal (100)
The Number of Authentication Records	The number of authentication results saved in a terminal
The Maximum Number of Authentication Records	The maximum number of authentication results that can be saved in a terminal (5,119)

3.7. Extra Function


If "5.Ext Function" is selected in the main menu, the following screen is displayed.

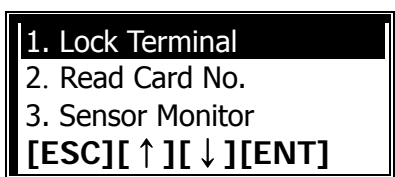

After selecting a menu to change by pressing [↑][↓] key, press [ENT] button.

3.7.1. Terminal Lock Setting


- ◆ At default screen [F3~] → [5. Ext Function] → [1. Lock Terminal] ◆

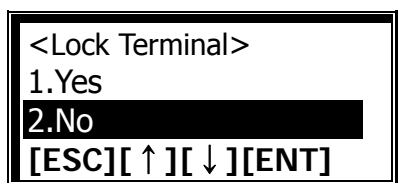

Default setting `1`: Terminal lock set
`2`: Terminal lock cancel

This function allows the administrator to set or cancel the terminal's locking from the terminal rather than by the server program. If it is set to `1`, locking state is set in and no one can access the door until the administrator cancels the setting.

- ▶ In case terminal locking time is set in the server, the following menu is displayed to allow the administrator to open the door temporarily.

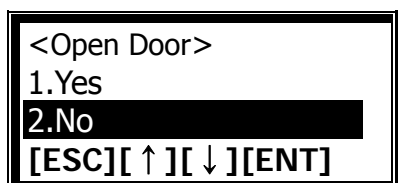


If `1.Yes` is selected, the door opens.

- ※ To use this function, **“Allow administrator access”** item must be checked in the terminal option of the server program.

After selecting a setting value, press [ENT] button to move to the upper menu.

3.7.2. Card Number Inquiry

- ◆ At default screen [F3~] → [5. Ext Function] → [2.Read Card No.] ◆

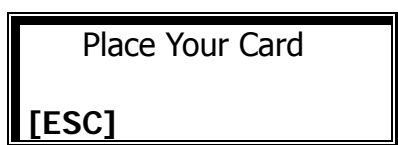

This is an additional function that is not related to the environment setting of the terminal. A terminal with card reader can read a card number to allow card registration at the server. If a card is placed while this screen is displayed, the card number is displayed on the LCD screen.


Press [ESC] button to leave from the card reading menu and move to the upper menu.

3.7.3. Sensor Monitor Input Port Setting

3.7.3.1. Sensor Monitor 1 Input Port Setting

This function sends an alarm message to the server by detecting fire or heat through the detection sensors connected to the input port of the terminal.

◆ At default screen [F3~] → [5. Ext Function] → [3.Sensor Monitor] ◆

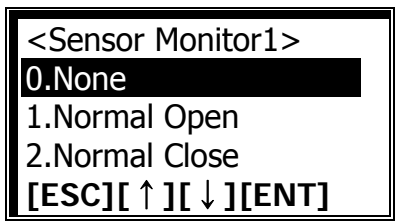


Default setting '0': Port state is not checked.
 '1': If port state becomes 1, state information is sent to the server.
 '2': If port state becomes 0, state information is sent to the server.

If it is set to '1' or '2', state information is sent to the server when the state value of Door_Monitor_0 port is changed. In such a case, the pre-set pop-up message saved in the server is displayed.

The sensor monitor1 port uses the same port as the door monitor pin. Therefore, if Menu→3.Option→3.Set Doorlock→<Door Monitor> is set to '1' or '2', this port is set to '0.None' under any conditions.

If <Sensor Monitor1> is set to '1' or '2', the menu to select port state transmission option is displayed. Port state information can be sent to the server only once when the port state becomes "On" or whenever the port state is changed.

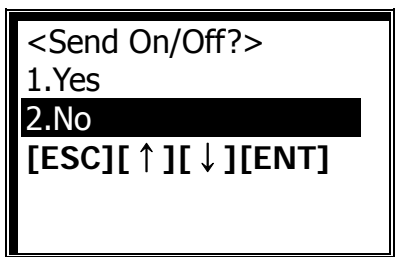

If it is set to default setting '2.No', port state information is sent only when the port state becomes "On".

If it is set to '1.Yes', port state information is sent to the server whenever the port state is changed.

Press [ENT] button to continue setting.


3.7.3.2. Sensor Monitor 2 Input Port Setting

This menu determines whether to send the state value of Door_Monitor_1 port to the server. Setting procedures for this menu are identical to those of 3.7.3.1. Sensor Monitor 1.

After selecting a setting value, press [ENT] button to move to the upper menu.

3.8. Device Setting

If "6.Device" is selected at the main menu, the following screen is displayed.

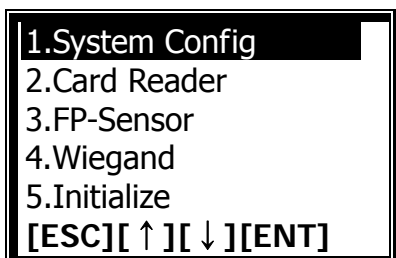


After selecting a menu to change by pressing [↑][↓] key, press [ENT] button.

In most cases, device settings do not require change after installation. Therefore, it is recommended not to change them during operation without any particular reason for doing so.

3.8.1. System Configuration

3.8.1.1. User ID Digit Setting

◆ At default screen [F3~] → [6.Device] → [1.System Config] ◆

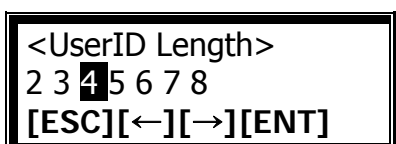

Default setting: '4'

This option sets the length of user ID. A user ID consisting of 2~8 digits is allowed and it must be of identical length to the one registered in the server program. If a 6-digit ID '000075' is registered in the server program, this item is set to 6.

After selecting a setting value, press [ENT] button to move to the upper menu.

3.8.1.2. Language Setting

```

<Language>:01
0=K 1=E 2=J 3=ES
4=P 5=PT 6=C 7=U
8=I 9=VT 10=TH
11=TW 12=DA 13=R
14=FR 15=FA
[ESC][↑][↓][ENT]

```

Default setting: `1=EN`
 0=Korean, 1= English, 2=Japanese,
 3=Spanish, 4=Polish, 5=Portuguese,
 6=Chinese, 7=Arabic, 8=Italian,
 9=Vietnamese,10=Thai,11=Taiwanese,
 12=Danish,13=Russian,14=French, 15=Farsi

If the language setting is changed, messages displayed on the screen are expressed using the changed language.

3.8.2. Card Reader Setting

◆ At default screen [F3~] → [6.Device] → [2.Card Reader] ◆

```

<Card Reader >
0.RF/SC/Wiegand
1.SmartCard
[ESC][↑][↓][ENT]

```

Default setting: `0`

This option selects a card reader type. It is set to the default value `0` in case of a low frequency card or when reading the serial number of smart card. It is set to `1` in case of reading data from a specific block of smart card. The server sets the detailed card format.

▶ If the card reader type is set to `0`, the card number display type can be changed by selecting <Card Format>.

```

<Card Format >
0.Hexa 1
1.Hexa 2
2.Decimal 1
3.Decimal 1
[ESC][↑][↓][ENT]

```


Default setting: `0`

This menu designates a type for displaying a card number that was read. Hexa setting displays using hexadecimal numbers while Decimal setting displays using decimal numbers.

3.8.3. Fingerprint Sensor Setting

3.8.3.1. 1:1 Level Setting

◆ At default screen [F3~] → [6.Device] → [3.FP Sensor] ◆

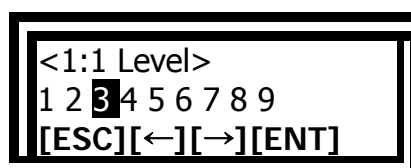

Default setting: '3'


When comparing the users' fingerprints saved in the terminal database with the fingerprint in the fingerprint input window, this function sets the level of correspondence that can be considered as the identical fingerprint. A higher authentication level provides a higher security level. However, a higher security level may lead to a higher authentication denial rate.

In case of 1:1 authentication level, this function is used to locate the fingerprint registered with ID '1234' from the terminal database and compare it with the fingerprint entered in the fingerprint input window if the ID entered with authentication level used in case authentication and processed along with ID input is '1234'.

However, in case of 1:1 authentication, user's authentication level is followed if user's 1:1 authentication level was not set to '0' (terminal's authentication level used).

Press [ENT] button to continue setting.

3.8.3.2. 1:N Level Setting

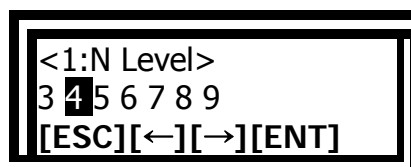

Default setting: '4'


This is the menu that sets the authentication level in case of using only fingerprint input without ID input.

This function is used to locate the corresponding fingerprint by comparing the fingerprint entered in the fingerprint input window with the fingerprints saved in the terminal database.

In case of 1:N authentication level, setting authentication level for each user is not allowed and terminal's authentication level is used as basis.

Press [ENT] button to continue setting.

3.8.3.3. LFD Setting

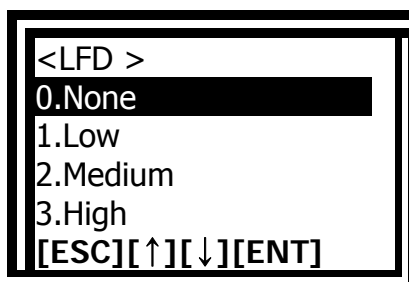


Default setting: '0.None'

This menu sets the LFD level that can prevent the input of imitation fingerprints. A higher LFD level strengthens the function for preventing the input of imitation fingerprints made using materials such as rubber, paper, film and silicone. However, a higher LFD level may also prevent the input of real fingerprints if they are too dry.

After selecting a setting value, press [ENT] button to continue setting.

3.8.3.4. Similar Fingerprint Registration Restriction Setting

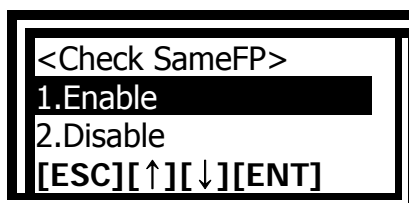


Default setting: '1.Enable'

If this menu is set to '1.Enable', a checking is performed during the registration process to determine whether a new fingerprint is already registered. This prevents the same fingerprint from being registered again as a new user ID.

After selecting a setting value, press [ENT] button to continue setting.

3.8.4. Wiegand Output Setting

◆ At default screen [F3~] → [6.Device] → [4.Wiegand] ◆

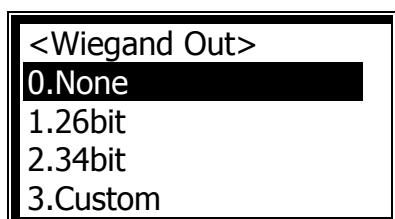

Default setting: '0'

This function is used only in case that an additional controller operated by Wiegand input is installed. After authentication is completed, the data in the following types are sent to the Wiegand port of the terminal.

0.None	This is a general case and Wiegand out port is not used.
1.26bit	As "Sitecode[1byte] + User ID[2bytes]" is sent, the user ID is set using less than 4 digits. Transmission example) For SiteCode:045, UID:6543 → 1 00101101 0001 1001 10001111 0
2.34bit	As "Sitecode[1byte] + User ID[3bytes]" is sent, the user ID is set using less than 7 digits. However, if the user ID consists of 8 digits, Sitecode is ignored and only "User ID[4bytes]" is sent. Transmission example) SiteCode:001, UID:123456 → 0 00000001 00000001 11100010 01000000 0
3.Custom	As a setting made through user definition, this setting can be set only at the server. You can only check it at the terminal.

※ It has nothing to do with the use of a Wiegand type card reader. If it is set to '1' or '2', the following site code value is set.

```
<Site Code>
(0-255):000
```

Default setting: '000'

This option can be used when the above Wiegand out is set to '1' or '2'. Enter a designated value between 0~255 in a site code to send to the Wiegand port along with a user ID.

After entering a setting value, press down [F4] button for a longer period of time to move to the upper menu.

3.8.5. Terminal Initialization


If [5.Initialize] is selected after selecting "6.Device" at the main menu, the following selection menu is displayed.

```
1. Init Config
2. Delete Log
3. Init Terminal
[ESC][↑][↓][ENT]
```

Select [1] to initialize setting values, [2] to initialize authentication records, and [3] for factory reset.

3.8.5.1. Setting Value Initialization

◆ At default screen [F3~] → [6.Device] → [5.Initialize] → [1.Init Config] ◆

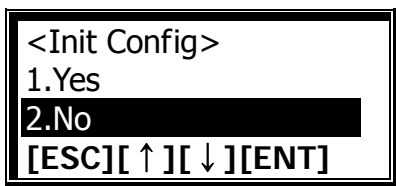


Select [1] to initialize,
and [2] to cancel.

All terminal's setting values except MAC (physical) address are initialized but the users and authentication records are not deleted.

If initialization is completed successfully, "ppiririck" buzzer sound is heard and the system moves to the upper menu.

3.8.5.2. Authentication Record Initialization

◆ At default screen [F3~] → [6.Device] → [5.Initialize] → [2. Delete Log] ◆

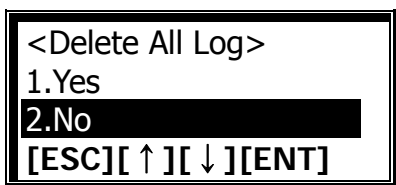


Select [1] to initialize,
and [2] cancel.

All authentication-related logs are deleted but the setting values and users are not deleted.

If initialization is completed successfully, "ppiririck" buzzer sound is heard and the system moves to the upper menu.

3.8.5.3. Factory Reset

◆ At default screen [F3~] → [6.Device] → [5.Initialize] → [3. Init Terminal] ◆

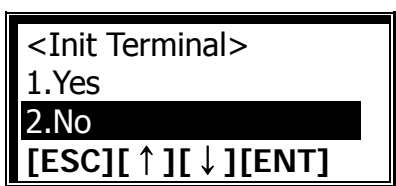

Select [1] to initialize,
and [2] to cancel.

All data are deleted and the terminal enters into a factory reset state.

If initialization is completed successfully, the buzzer sound for success is heard and the terminal is rebooted.

4. How to Use Terminal

4.1. In Case of Operating as [0.Access Ctrl]


- Set as Menu → 3.Option → 1. Application → [0.Access Ctrl]

4.1.1. Authentication Mode

- Authentication is done after changing to a desired authentication mode such as F1, F2, F3 and F4 by pressing the function keys. In case of authenticating without pressing any function key, authentication with access mode is done automatically.
- Authentication method
 - F1 authentication: Authentication is done after changing to F1 mode by pressing [F1] key.
For hours set as office start time, authentication is done without mode change.
 - F2 authentication: Authentication is done after changing to F2 mode by pressing [F2] key.
For hours set as office leave time, authentication is done without mode change.
 - F3 authentication: Authentication is done after changing to F3 mode by pressing [F3] key.
 - F4 authentication: Authentication is done after changing to F4 mode by pressing [F4] key.
 - Access authentication: Authentication is done after changing to access mode by pressing [F4] key or authentication is done without mode change for hours not set as office start/leave time.


4.1.2. Authentication Using Fingerprint

- ▶ After changing the authentication mode by pressing a function key, place the finger on the fingerprint sensor. Afterwards, the fingerprint is entered and the authentication is displayed on the LCD screen along with a voice message.

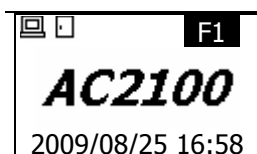


Change authentication mode to 'F1' by pressing [F1] key in the alert state.



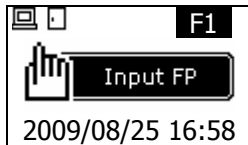

When you place the finger on the fingerprint sensor, the fingerprint input window is lighted in red along with ppik" sound. Leave the finger until the light is switched off.

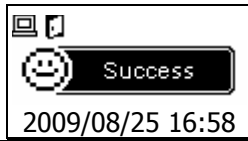

Upon authentication success, the voice message "You are authorized" is heard and the success message is displayed on the LCD screen.

- ※ Error message: The following message along with the voice message "Try it again" is displayed.




In case of authentication failure



In case of trying to authenticate during a time not allowed for access even though the registration is valid

4.1.3. Authentication Using Card

- ▶ If a user registered with [Card] or [Card or FP] places the card on the default screen, "ppik" sound is heard and authentication result is displayed on the LCD screen.

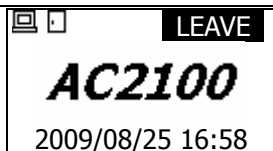

Change authentication mode to office leave mode by pressing [F2] key.




Upon authentication success, the voice message "You are Authorized" is heard and the authentication success message is displayed on the LCD screen.

- ※ Error message: The following message along with the voice message "Please try again" is displayed.




In case entering an unregistered card

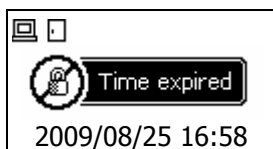

In case of trying to authenticate during a time not allowed for access even though the registration is valid

- ▶ If a user registered with [Card and FP] places the card on the default screen, "ppik" sound is heard and the following additional fingerprint input procedure is required for authentication.

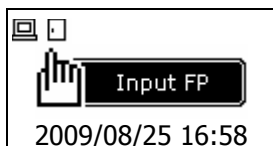

The fingerprint input window is lighted along with the voice message "Please enter your fingerprint". Enter fingerprint and leave it until "ppik" sound is heard.

4.2. In Case of Operating as [1.T&A Ctrl]

- Set as Menu → 3.Option → 1. Application → [1.T&A Ctrl]
- In case office start/leave time is fixed, setting of <Start Time> and <Leave Time> enables authentication as start office during start office hour and as leave office during office leave hour without pressing [F1] or [F2] key. Being as such, it reduces the input error regarding the user's time & attendance.

4.2.1. Authentication Mode

- Authentication is done with each of the authentication modes after changing to start office, leave office, work outside, return to office and access modes by pressing the function keys.
- Authentication method
 - Start office authentication: Authentication is done after changing to start office mode by pressing [F1] key.
Authentication is done without mode change during hours set as start office time.
 - Leave office authentication: Authentication is done after changing to leave office mode by pressing [F2] key.
Authentication is done without mode change during hours set as leave office time.
 - Work outside authentication: Authentication is done after changing to work outside mode by pressing [F3] key.
 - Return to office authentication: Authentication is done after changing to return to office mode by pressing [F4] key.
 - Access authentication: Authentication is done after changing to access mode by pressing [F4] key or authentication is done without

mode change for hours not set as office start/leave time.

4.2.2. Fingerprint Authentication

- Change time & attendance mode by pressing the function keys.
- Enter fingerprint.

4.2.3. Authentication Using Card

- Change time & attendance mode by pressing the function keys.
- Place card.

4.3. In Case of Operating as [2.Meal Ctrl]

- Set as Menu → 3.Option → 1. Application setting → [2.Meal Ctrl]
- If set as meal service management, the terminal enters into a lock state except during meal service time. Therefore, at least one meal service time must be entered.

- Display Screen



In case it is not meal service time (Authentication attempt not allowed)

Default screen during meal service time

In case of authentication success

If setting does not allow duplicated authentication, duplicated authentication trial error is displayed for the authentication attempt after a successful authentication

- In case of fingerprint authentication
Authentication is done by entering a fingerprint.
- In case of card authentication
Authentication is done by placing a card.
- In case of attempting authentication without pressing the menu selection key,
authentication is done automatically with [Menu 1].